



ORIGINAL	SUPERIOR
	<b>POWER</b>
	<b>MUTE</b>
<b>MENU</b>	<b>MENU</b>
<b>EXIT</b>	<b>EXIT</b>
<b>1/2/3/4/5</b>	<b>1/2/3/4/5</b>
<b>6/7/8/9/0</b>	<b>6/7/8/9/0</b>
/ AV	/ SOURCE
	-/--
<b>ZOOM</b>	
<b>V. FORMAT</b>	
<b>VOL+</b>	<b>VOL+</b>
<b>VOL -</b>	<b>VOL -</b>
<b>CH+</b>	<b>P+</b>
<b>CH -</b>	<b>P -</b>
<b>UP</b>	<b>UP</b>
<b>DOWN</b>	<b>DOWN</b>
<b>LEFT</b>	<b>LEFT</b>
<b>RIGHT</b>	<b>RIGHT</b>
<b>OK</b>	<b>OK</b>
	<b>BACK</b>
<b>SLEEP</b>	<b>SLEEP</b>
	<b>TV/DTV</b>
	<b>INFO</b>

ORIGINAL	SUPERIOR
<b>GUIDE</b>	<b>EPG</b>
<b>FAV</b>	<b>FAV</b>
<b>RED</b>	<b>RED</b>
<b>GREEN</b>	<b>GREEN</b>
<b>YELLOW /</b>	<b>YELLOW</b>
<b>BLUE /</b>	<b>BLUE</b>
<b>SAT</b>	<b>SHIFT+ </b>
<b>SKIP NEXT</b>	<b>SHIFT+ P+</b>
<b>SKIP PREV</b>	<b>SHIFT+ P -</b>
	<b>SHIFT+UP</b>
	<b>SHIFT+DOWN</b>
	<b>SHIFT+LEFT</b>
	<b>SHIFT+RIGHT</b>
	<b>SHIFT+OK</b>
	<b>SHIFT+SLEEP</b>
<b>PAUSE</b>	<b>SHIFT+ </b>
<b>STOP</b>	<b>SHIFT+ </b>
<b>REC</b>	<b>SHIFT+RED</b>
<b>REW</b>	<b>SHIFT+GREEN</b>
<b>PLAY</b>	<b>SHIFT+YELLOW</b>
<b>FWD</b>	<b>SHIFT+BLUE</b>

COMPATIBLE DEVICES

**FREEDOM**

**SUPERIOR 4:1**

**SUPERIOR 2:1**

**SUPERIOR 1:1**

Simply

Hotel TV

Simply Digital TV



VISIT OUR WEBSITE TO DISCOVER